Hillside Imports Do-It-Yourself guide for the European under seat drawers

Required tools: 12 point 10MM allen socket with wrench Phillips screwdriver Rivet gun



1. Move seat all the way forward




- 2. Unbolt two rear 12 point allen bolts on rear of seat track3. Move seat all the way back



4. Unbolt two front 12 point allen bolts on front of seat track

5. Tilt seat back to expose underside of seat

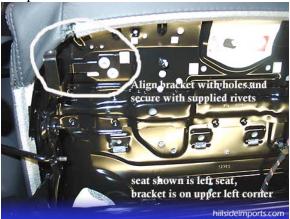

6. Secure drawer bracket to seat, line up holes on bracket to holes on lower seat frame and screw with supplied self tapping screws (five screws per seat)

7. Install drawer, pushing in until it snaps in place and secures itself

